

クイックスタートガイド

Grinding Level setting

The specified setting for grinding level and times may differ from coffee beans, coffee machine, brewing method, so we recommend that you test different settings to suit your personal taste.

	Super Fine	Fine	Medium	Coarse
Recommended grinding level	1-5	5-15	15-25	25-35
Apply to	 Espresso machine	 Steam brewing coffee pot or coffee machine	 Drip Pour Over	 French press or cold brew

Cleaning and Maintenance

 01 Ensure the timer is Off position.	 02 Remove the plug from the socket. Let the device to cool down completely.	 03 Store excess cord by wrapping cord around the tabs provided under the base of the unit.
 04 Do not use the alcohol, petrol or corrosive liquids, only use a soft cloth with a little washing-up liquid to clean the surface.	 05 Move ▼ to ▲, and remove the container lid, container, silicone ring, remove the grinding mechanism upwards.	 06 Use the cleaning brush to clean. They must not be wet cleaned. Do not use abrasive brushes and cleaning tools, or hard objects to clean.
 07 Do not clean the parts by dishwasher. They can be cleaned with warm water and a little washing-up liquid.	 08 All removable parts must be completely dry before re-installation. Ensure the parts are installed in right position.	 09 Ensure ▼ does not pointed at ▲, and then store the device in a dry and clean area.

⚠ 注意事項

- この取扱説明書をよくお読みになり、安全に関する注意事項をご確認の上、大切に保管してください。
- 本体・コード・電源プラグを水やその他の液体に浸したり、火の近くに置かないでください。
- 子供は使用できません。コードは子供から遠ざけてください。
- 本機器を本来の用途以外には使用しないでください。

操作説明

 01 デバイスのクリーニングには柔らかい布を使用してください。	 02 タイマーがオフの位置にあることを確認して下さい。	 03 ▼が▲の位置にない事を確認してください。同じ位置に有ると正常に動作致しません。	 04 コーヒー豆 (250グラム) を入れ、容器の蓋がしっかり閉まっていることを確認します。
 05 電源プラグをソケットに挿入します。	 06 豆挽きレベルを 1 ~ 35 の範囲で設定します。	 07 タイマーをポジション 1 (5秒) から 11 (55秒) の間に設定します。ひと目盛で 5秒ずつ増加します。	 08 ①を押すと、動作が開始します。
 09 タイマー時間が終了前に完全に豆挽き完了した場合は▲を押して停止します。停止時間後に完全に豆挽きされしていない場合は、再度▲押して操作を開始してください。デバイスを 3分以上使用しないでください。使用した場合は30分程冷してから使用してください。	 10 挽いたコーヒーがポルタフィルターにそのまま注がれて溢れるのを防ぐために、タイマーの位置を 1または 2に設定することをお勧めします。必要に応じて手順 7を繰り返してください。	 11 挽き終わったら、チャンバーを外してコーヒーを淹れます。コーヒータイムをお楽しみください。	 12 使用しない場合は、タイマーがオフの位置にあることを確認し、ソケットから電源プラグを取り外してください。次回の使用のために本体の簡単なクリーニングを行います。

豆挽きレベル

挽き加減や時間の指定は、コーヒー豆やコーヒーマシン、淹れ方によって異なる場合がありますのでお好みに合わせていろいろ試してみることをおすすめします。

	極細挽き	細挽き	中挽き	粗挽き
豆挽きレベル	1-5	5-15	15-25	25-35
淹れ方	 エスプレッソマシン ポルタフィルター	 スチームブリューイング コーヒーマシン	 ドリップコーヒーマシン	 フレンチプレス 水だしコーヒー

クリーニングとメンテナンス



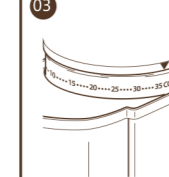

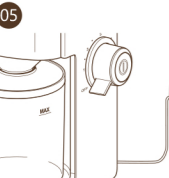
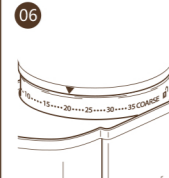
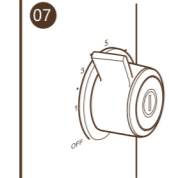
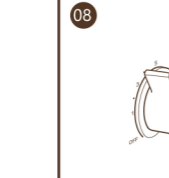
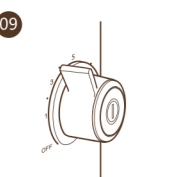

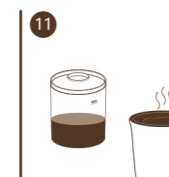
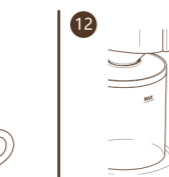
 01 タイマーがオフの位置にあることを確認します。	 02 ソケットから電源プラグを取り外します。本体が完全に冷えるまで待って下さい。	 03 余分なコードは、本体底面の巻き付け部分に収納して下さい。
 04 アルコール・ガソリン・腐食性の液体は使用しないでください。表面をきれいにするためには柔らかい布を使い、少量の洗剤で清掃してください。	 05 ▼を▲に移動し、ホッパー蓋、ホッパー、シリコンリングを外し、外挽き刃機構を上に取り外します。	 06 専用ブラシを使用して清掃して下さい。挽き刃機構は水洗いできません。専用ブラシ以外の物で清掃しないで下さい。刃が欠けたり破損する恐れがあります。
 07 食器洗い機で洗浄しないでください。容器が変形する恐れがあります。引き刃機構以外の部品はぬるま湯と少量の洗剤で洗うことができます。	 08 再取り付けの前に、すべての取り外し可能な部品を完全に乾かしてください。部品が正しい位置に取り付けられていることを確認して下さい。	 09 ▼が▲を指していないことを確認し、湿気が少ない清潔な場所に本機を保管してください。

快速使用指南

⚠ 注意

1. 使用前閱讀說明書和使用指南
2. 遠離水源和火源
3. 確保由成人操作，遠離孩童
4. 請安全正確的使用

操作說明

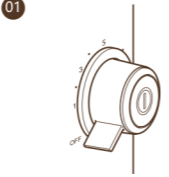

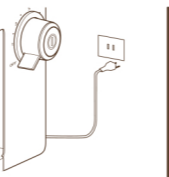



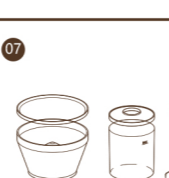

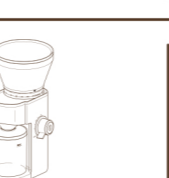
<p>01</p>  <p>首次使用之前，請用乾淨的清潔軟布輕抹外殼和咖啡豆容器</p>	<p>02</p>  <p>確保定時器處於OFF位置</p>	<p>03</p>  <p>確保 ▼ 不在 Ⓜ，研磨機安裝在正確的位置才能操作</p>	<p>04</p>  <p>放入適量咖啡豆份量（最高容量為250克或 8.8 安士），並放回蓋子</p>
<p>05</p>  <p>將插頭插入電源插座</p>	<p>06</p>  <p>設置研磨級別從 1 到 35 的選定</p>	<p>07</p>  <p>設置研磨時間由1號為5秒，每次5秒遞增，於11號大概為55秒</p>	<p>08</p>  <p>按 ① 開始操作</p>
<p>09</p>  <p>在設置時間之前完成研磨，按 ① 停止。在設置時間之後沒有完成研磨，再次按下 ① 以繼續操作。不要使用設備超過 3 分鐘，並讓它冷卻 30 分鐘</p>	<p>10</p>  <p>如果用移動式過濾器，將設置研磨時間為位置 1 或 2 以防止研磨咖啡粉溢出。如果需要，請重複步驟 7</p>	<p>11</p>  <p>研磨完成後，取出咖啡粉，製作咖啡。享受咖啡時光</p>	<p>12</p>  <p>如設備不使用，確保研磨機關閉，然後從電源插座拔下插頭。設備進行簡單清潔以備下次使用</p>

研磨級別說明

研磨級別和時間取決於咖啡豆、烘焙、個人喜好和不同的沖泡方法。因此建議測試不同的設置以適合您的個人口味。

	超幼	中等幼	中等粗	粗
建議研磨級別	1-5	5-15	15-25	25-35
適用於	濃縮咖啡機手柄 移動式過濾器	蒸汽沖煮式咖啡壺 或咖啡機	滴漏式咖啡壺	法式壓榨式或冷萃

清潔和保養


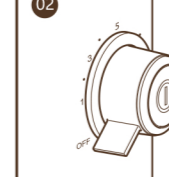
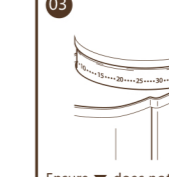
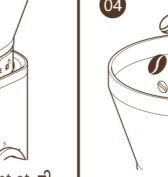

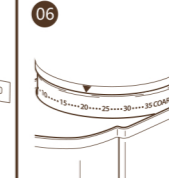
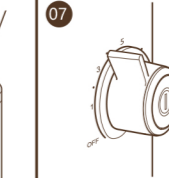

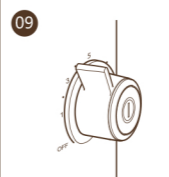

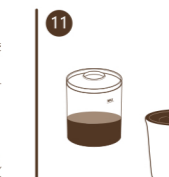

<p>01</p>  <p>確保定時器處於關閉OFF位置</p>	<p>02</p>  <p>從電源插座拔下插頭，讓設備完全冷卻</p>	<p>03</p>  <p>將電源線纏繞在設備底座下方的標籤上</p>
<p>04</p>  <p>僅有少量洗滌液的軟布清潔表面，不要用酒精、汽油或腐蝕性液體清潔表面</p>	<p>05</p>  <p>容器的 ▼ 與 Ⓜ 對齊，然後取下容器蓋、容器、砂膠圈，向上取下研磨機結構</p>	<p>06</p>  <p>使用我們提供的毛刷清潔研磨機結構和研磨體放區域。研磨機不得清洗。請勿使用打磨清潔工具或硬物清潔設備</p>
<p>07</p>  <p>以上可拆卸的部件不適合洗碗機，可以用溫水和少量洗滌液清洗</p>	<p>08</p>  <p>所有可拆卸部件在重新安裝前必須完全乾燥。確保安裝在正確的位置</p>	<p>09</p>  <p>確保 ▼ 不在 Ⓜ，存放在乾燥清潔的地方</p>

Quick Guide

⚠ Attention

1. Please read the user manual completely for all safety instructions and keep it for future reference.
2. Do not immerse the device, cord and plug in water or other liquids, or nearby the fire.
3. The device cannot be used by children and the cord must be kept away from children.
4. Do not use the device for other than intended use

Operating Instructions

<p>01</p>  <p>Use a soft cloth to clean the device.</p>	<p>02</p>  <p>Ensure the timer is OFF position.</p>	<p>03</p>  <p>Ensure ▼ does not point at Ⓜ grinder is operation unless all parts are properly in place.</p>	<p>04</p>  <p>Fill coffee beans (250grams or 8.8 ounces) and ensure that container lid closes securely.</p>
<p>05</p>  <p>Insert the plug into a socket.</p>	<p>06</p>  <p>Set the grinding level from 1 ~ 35.</p>	<p>07</p>  <p>Set the timer from position 1 (5 seconds) to 11 (55 seconds), 5 seconds increased in each position.</p>	<p>08</p>  <p>Press the ① to start the operation.</p>
<p>09</p>  <p>Grinded completely before the timer set, press ① to stop. Not grinded completely after the time stop, press ① again to keep the operation. Do not use the device more than 3 mins and let it cool down at 30 mins.</p>	<p>10</p>  <p>To prevents the ground coffee is filled over the portafilter directly, suggest to set the timer position 1 or 2. Please repeat step 7 if requests.</p>	<p>11</p>  <p>After the grinding completed, remove the chamber, make coffee. Enjoy the coffee time.</p>	<p>12</p>  <p>If the device is not use, pls ensure the timer is OFF position and remove the plug from socket. Make a simple cleaning of device for next use.</p>